

# CAUTION

Please follow the instructions below when applying a grease or oil cartridge.

## Applying Lubricus grease cartridge

1. Unscrew retaining ring anticlockwise to open housing
2. Remove green closing plug from cartridge
3. **Screw** cartridge to Lubricus lubrication system with the opening downwards
4. Put housing (including pressure plate and spiral spring) onto lubrication system
5. Make sure the pressure plate countersinks into the cartridge
6. Press housing downwards carefully and screw retaining ring clockwise

## Applying Lubricus oil cartridge

The oil cartridge is equipped with a floater.

1. Unscrew retaining ring anticlockwise to open housing
2. Take off green closing plug and apply enclosed oil plug (PU sponge) on cartridge opening carefully
3. **Screw** cartridge to Lubricus lubrication system with the opening downwards (the PU sponge is being pushed into the cartridge)
4. If available: Remove pressure plate and spiral spring
5. Apply housing (without pressure plate and spiral spring) by screwing the retaining ring clockwise

## WARNING:

**Do not use an oil cartridge combined with pressure plate and spiral spring!**

